

What to do if...
What to do if...



A tire punctures

P. 483 If you have a flat tire



The engine does not start

P. 492 If the engine will not start
P. 91 Engine immobilizer system
P. 500 If the vehicle battery is discharged



The shift lever cannot be moved out of P

P. 494 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 504 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 495 If you lose your keys



The battery runs out

P. 500 If the vehicle battery is discharged



The doors cannot be locked

P. 48 Doors



The horn begins to sound

P. 93 Alarm



The vehicle is stuck in mud or sand

P. 507 If the vehicle becomes stuck



A warning light or indicator light comes on

P. 463

If a warning light turns on or a warning buzzer sounds...



Warning lights



Brake system warning light

or



P. 463



Malfunction indicator lamp

or



P. 464



ABS warning light

or



P. 464



Driver's seat belt reminder light

P. 465



Front passenger's seat belt reminder light

P. 465



Low fuel level warning light

P. 465



Master warning light

P. 465



SRS warning light

P. 464



Electric power steering system warning light

P. 464



Open door warning light

P. 465



Tire pressure warning light

P. 465



Charging system warning light

P. 464



Slip indicator

P. 464



A warning message is displayed

P. 473

If a warning message is displayed